

# Lead-acid batteries

## Instructions for proper use




### General safety and care instructions



#### Read and follow the instructions for use

For more information, please refer to the instructions for use.

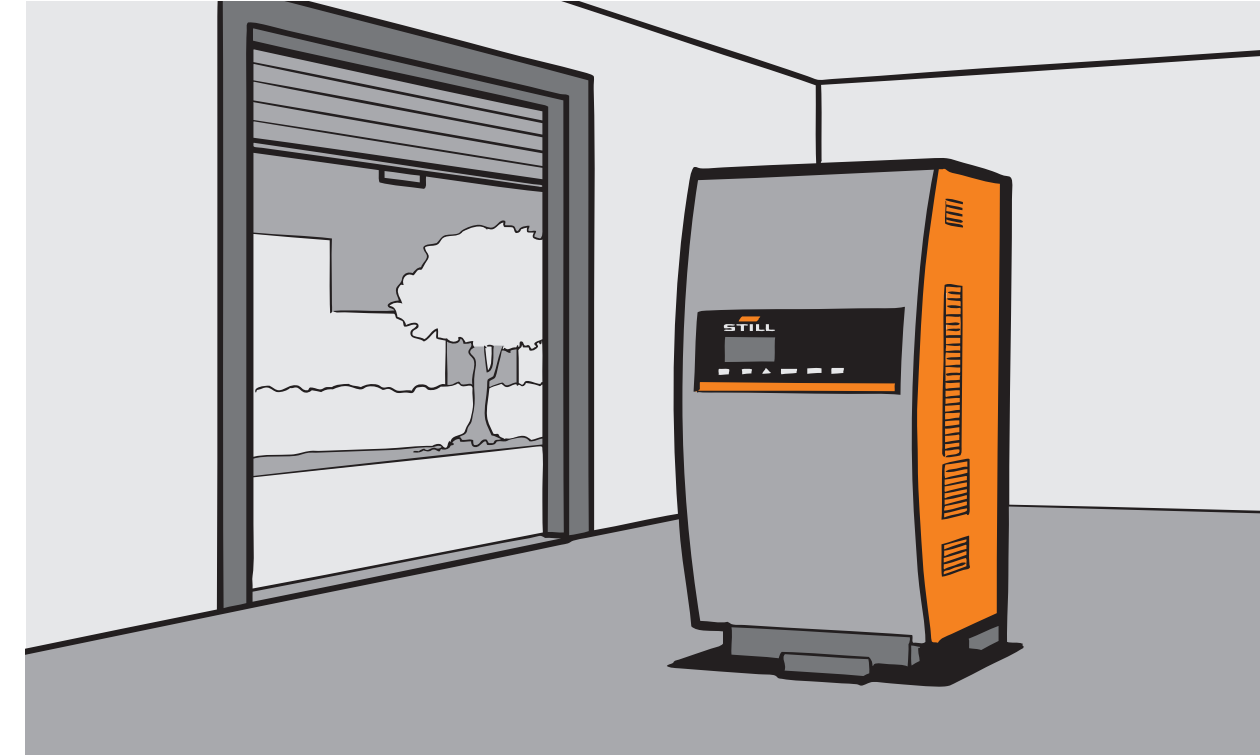

#### Ensure ventilation at the charging station

Be sure to provide sufficient ventilation of the charging station.



#### Work in a clean and dry manner

Ensure battery surfaces remain dry and free from dirt.



#### Wear protective clothing

Wear gloves and protective glasses when transporting, repairing and servicing batteries.



#### Only use distilled (demineralised) water

Only use distilled (demineralised) water to fill batteries.



#### Avoid total discharge

Charge the battery regularly in cycles to avoid total battery discharge.



#### Respect maintenance intervals

Have the drive battery and industrial truck checked regularly by STILL Service.



#### Have the drive battery and industrial truck checked regularly by STILL Service.

Service hotline


**0800 - 200 300 400**

### Proper charging




#### Visually check all battery components

Check the plugs and cables for all battery components and remove any metal objects from the battery – explosion and fire hazard!

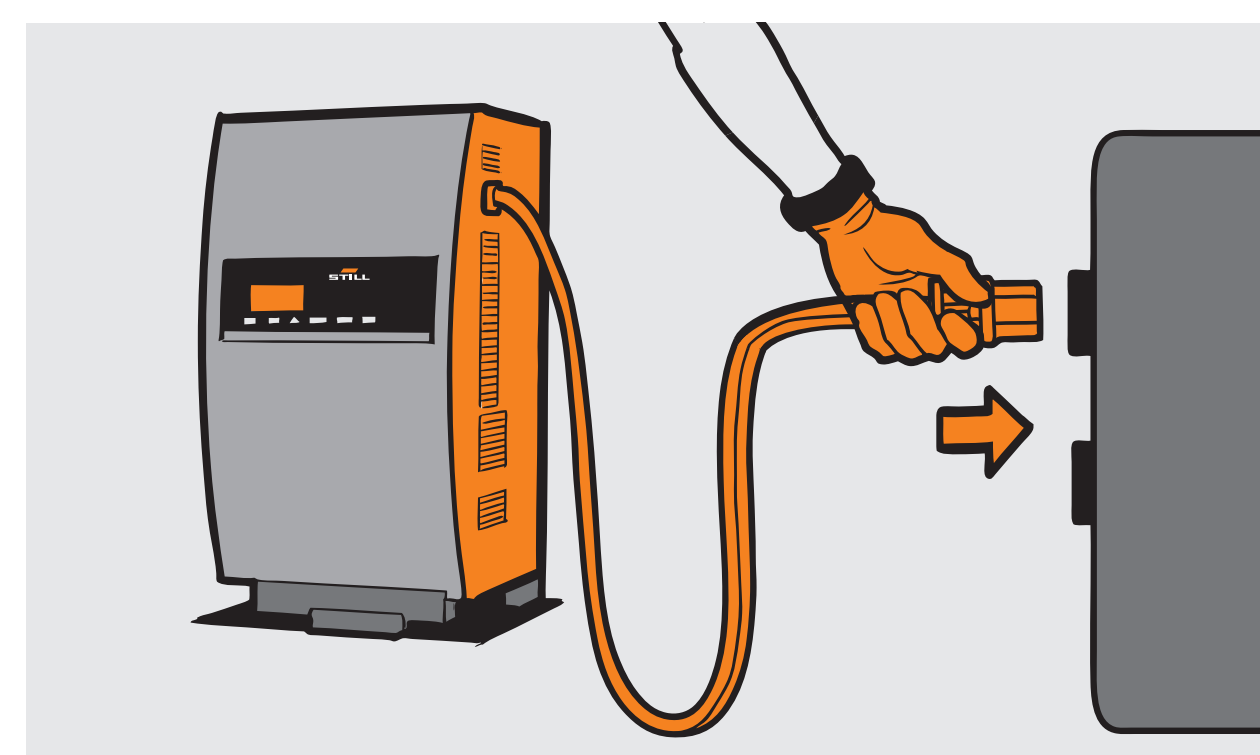


#### Batterie- und Ladegerätstecker verbinden

Only use the charger that has been recommended for use with the specific battery to avoid incorrect charging.

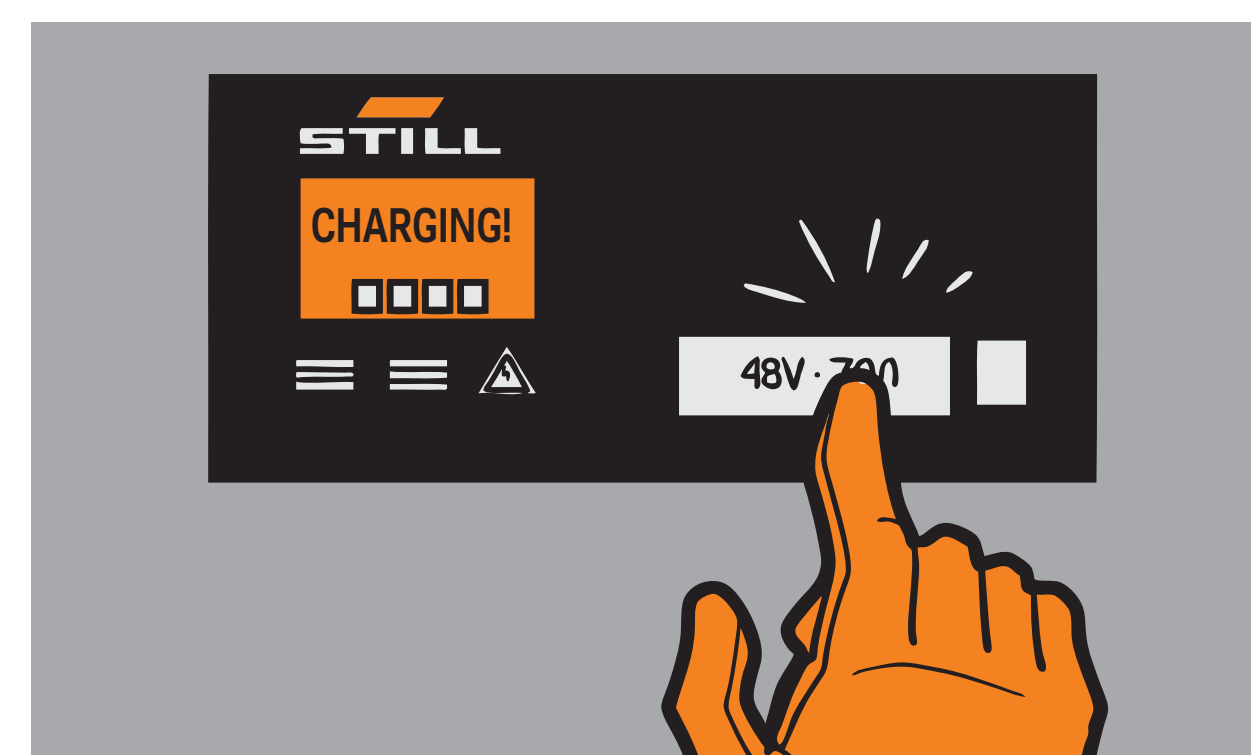


#### Start the charging process

Check the battery is charging properly.

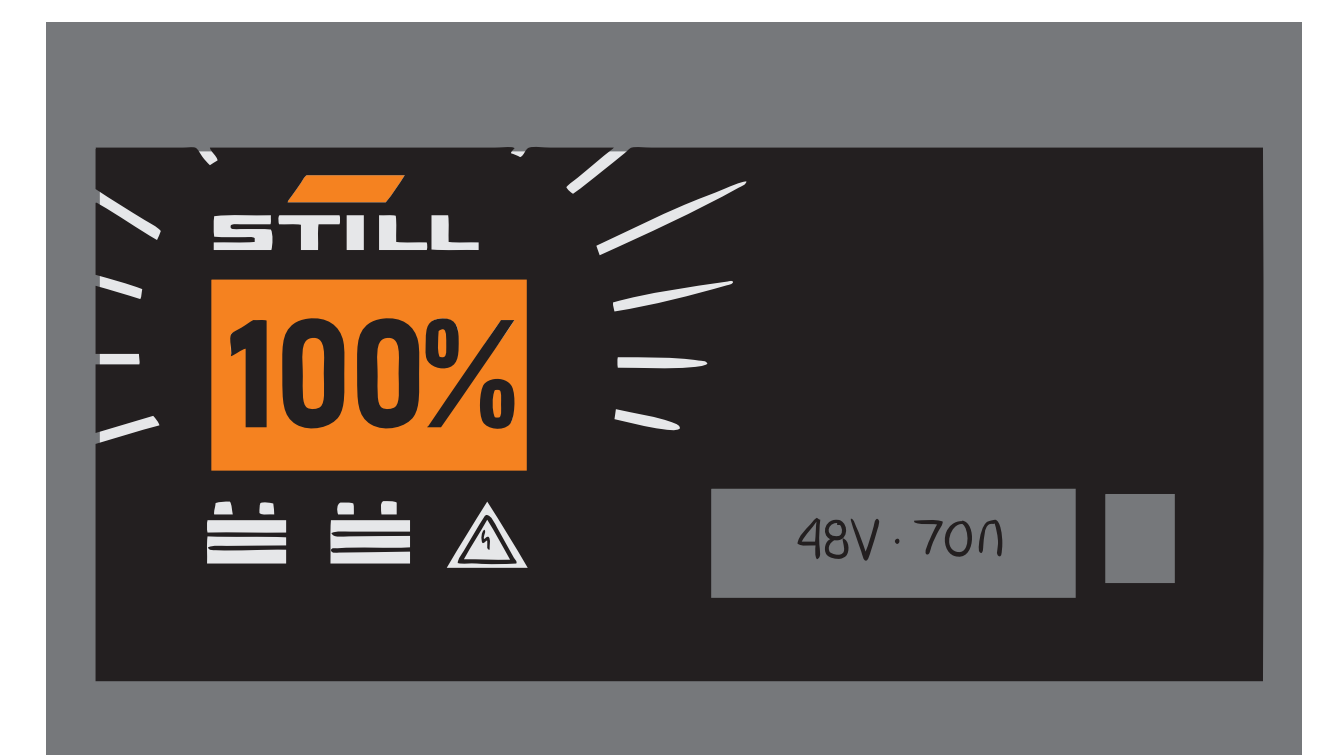

#### Fully charge the battery

Charge the battery completely. The charger turns off automatically once the battery is fully charged.

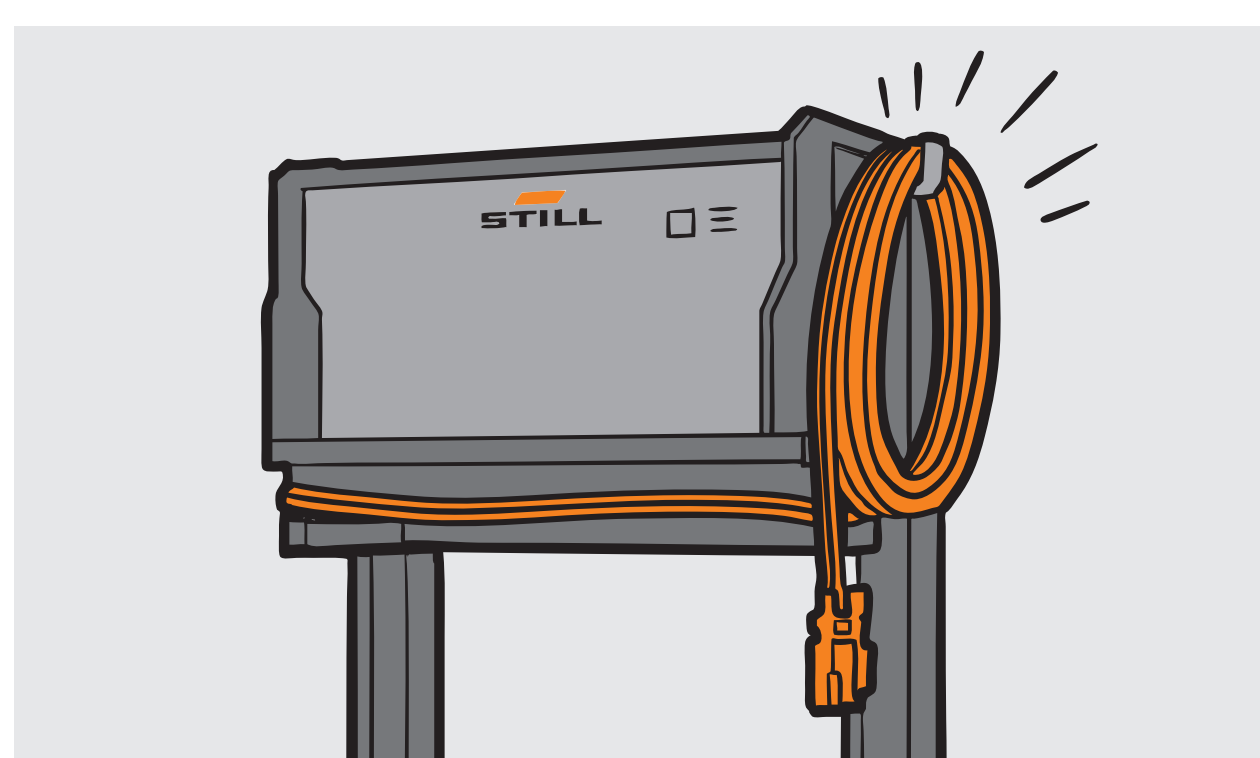


#### Store the battery cable correctly

Correctly store the battery cable to ensure a long service life.



#### Check the water level

If necessary, top up with distilled water but avoid overfilling.

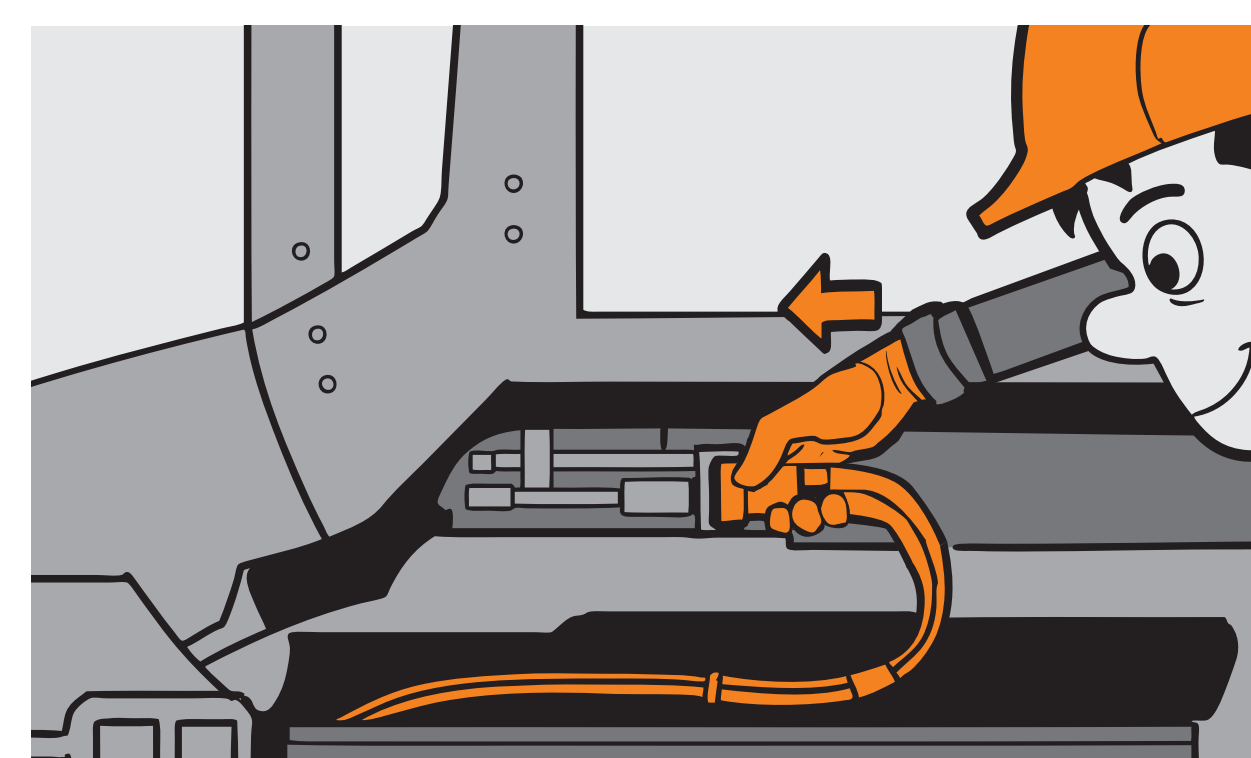

#### Reconnect battery to truck



#### Close battery cover

#### STILL GmbH

Berzeliusstraße 10  
D-22113 Hamburg  
Phone: +49 (0) 40 73 39 20 00  
Fax: +49 (0) 40 73 39 20 01  
info@still.de  
www.still.eu

first in intralogistics